



Olympus 16 Camera Setup Instructions

Bahr Marine Ecology Lab

IMPORTANT: Set camera setting to shoot in raw and turn on white correction settings.

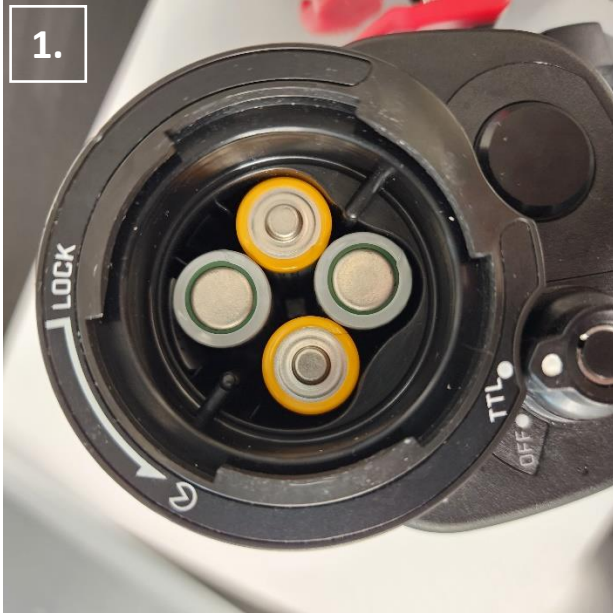


1. Place four AA batteries appropriately into strobe.
2. Press case door down firmly.

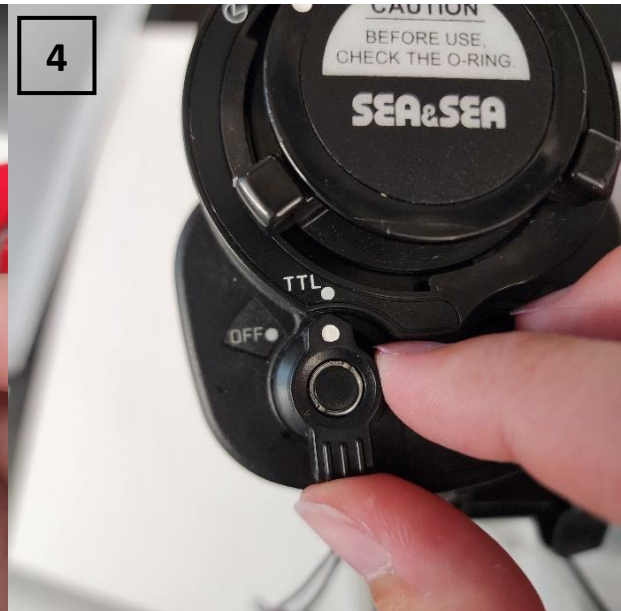


3. Twist dial to the right so that the arrows point toward each other.
 - This locks the battery case.
4. Turn small lower dial to TTL when in use.




5. Make sure arm is attached to strobe.
- Twist on attachment screw firmly.

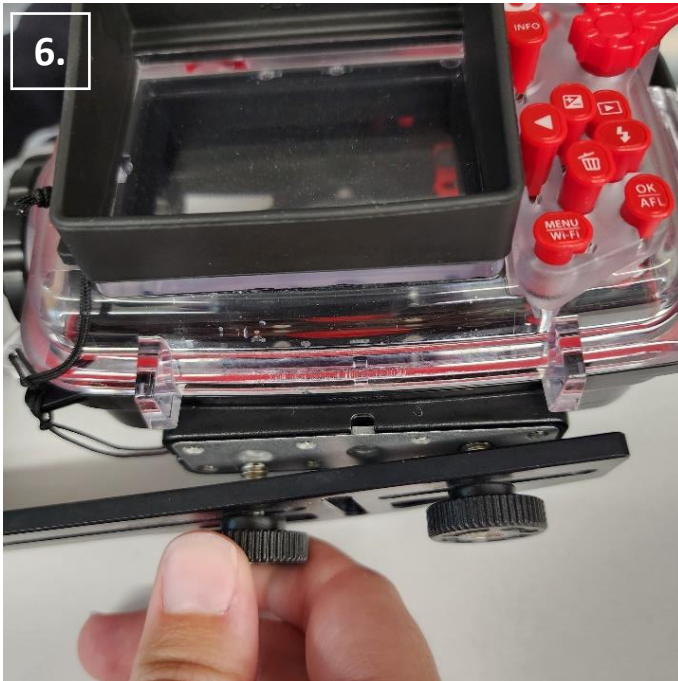

6. Make sure the arm mount is firmly screwed into the camera case with both screws.
7. Orient strobe above the camera when in use.

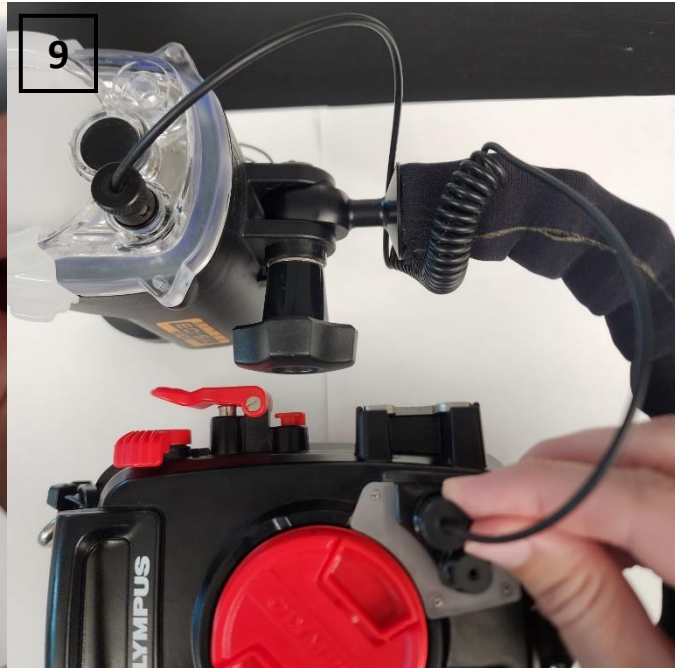

8. Plug one end of the optic cable into the strobe.
9. Plug the other end of the optic cable into the case port.
 - Wrap cable around the arm so that it will not get in the way.

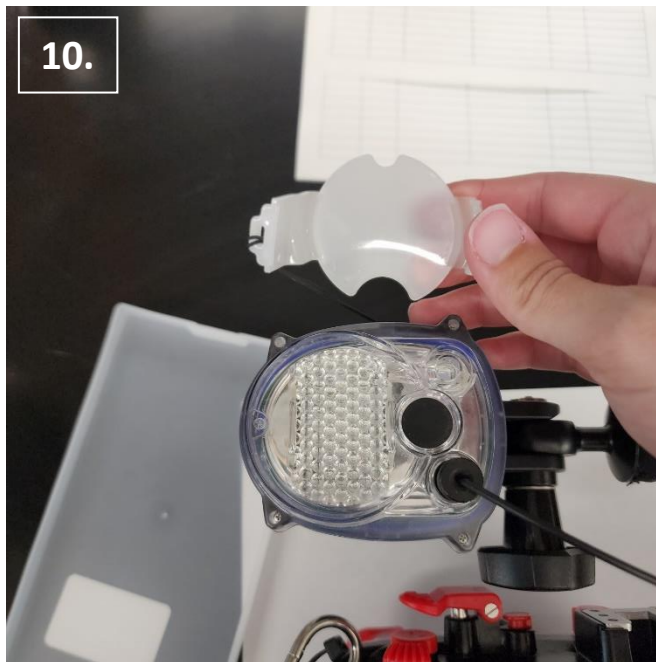

10. Take strobe over off.
11. Place moisture-removing packet into case along with camera.

Below: extra image, is this the correct optic cable config or is the first image correct: pls delete whichever picture is incorrect along with this section.

